

PARTY LINE

Cotton Candy Machine

Please read these instructions carefully before use



Operation

- Using a damp cloth, moisten the inside of the floss pan. This will help the floss adhere to the pan.
- Add Floss only while motor is off
- Manually spin the head to balance
- Fill sugar to about 90% full make sure that you **DO NOT OVERFILL**
- Pick up the cone, holding it an inch or two at the pointed end between your two fingers and thumb.
- With a light flicking action, break the web of floss that is building up in the Pan.
- A small amount of floss should stick to the cone. If not, brush the cone over a damp sponge first.
- Lift up the cone with the ring of floss attached, and, by rotating the cone, wind the floss onto it. Do not roll floss on the cone inside the floss pan, roll it on outside of the pan only.
- When stopping operation for the day or any prolonged period, it is a good idea to run all of the sugar out of the floss head.
- When empty, turn heat to the highest setting for approximately one minute to remove carbon from the ribbons.

Caution

- *NEVER ALLOW WATER TO ENTER THE FLOSS HEAD.*
- *PLEASE KEEP HANDS AWAY FROM THE SPINNER HEAD*
- *IF YOU HAVE ANY PROBLEMS PLEASE CALL THE OFFICE*

Party Line Rentals

21 Vreeland Ave Elmsford, NY 10523

(914) 592-1200

Partylinerentals.com