


# PARTY LINE

## Rotisserie Grill


Please read these instructions carefully before use

### Operation


-Position the Rotisserie frame on the Grill.

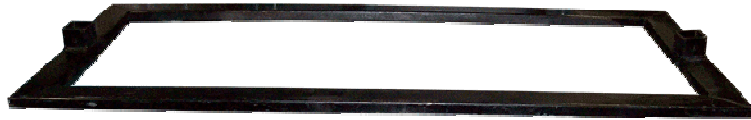

-Locate The Uprights And Insert them into the Frame facing outward. Insert pin to secure.

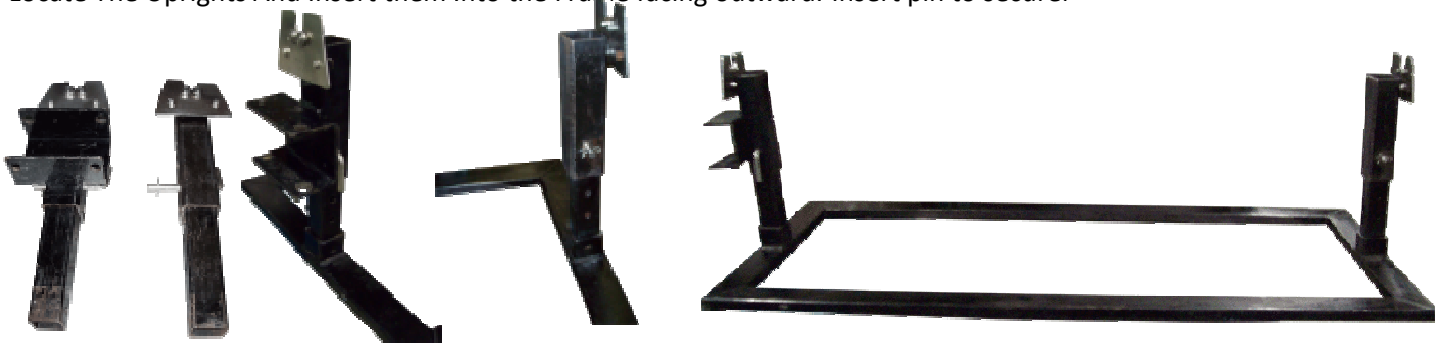


-Secure the Tines and Meat onto the Rotisserie crossbar.

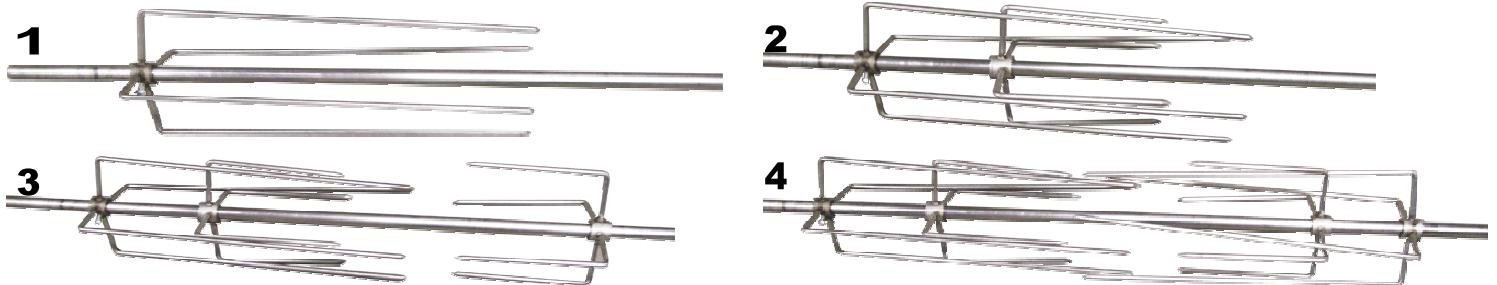


-Attach the Female end of the coupler to the end of the Crossbar. Screw Bolt to Tighten.




- Slide the motor mount rods into the mounting brackets holes

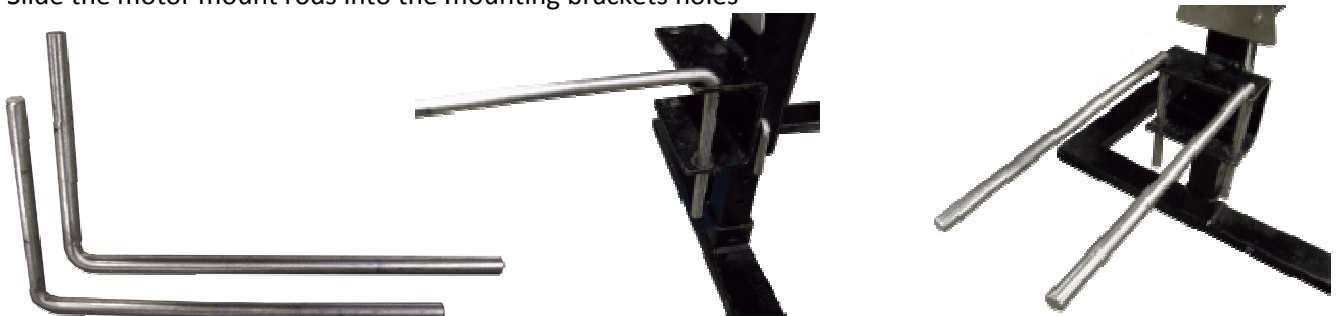


-Slide the motor onto the motor mount rods with the attached coupler facing the coupler on the tine rotisserie.

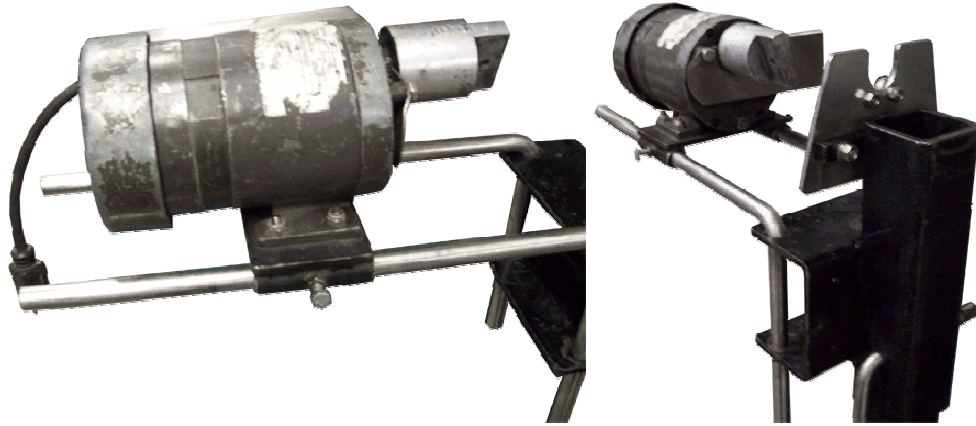

-Carefully Place the Crossbar onto the Uprights in the grooves

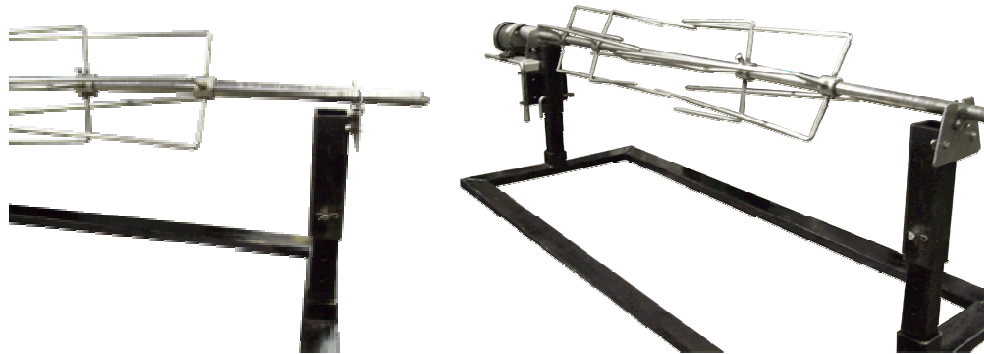

- Line up the couplers and slide the quick release pin into the hole and through the couplers to connect them. This should be a tight fit.

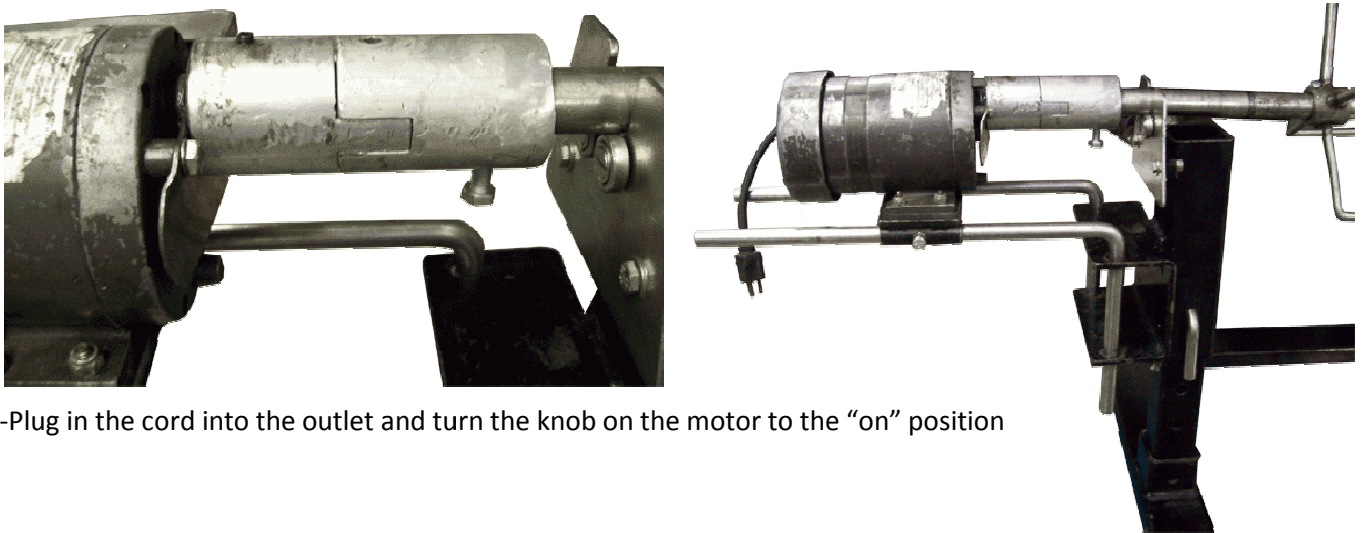

-Plug in the cord into the outlet and turn the knob on the motor to the “on” position