



Hot Dog Roller Grill

Please read these instructions carefully before use



Electrical requirements

Your Hot Dog Roller Grill requires a 120 volt/60 cycle/15 amp outlet, and should be operated on a dedicated line. Make sure to have a qualified electrician supply the proper electrical requirements before plugging the machine into an outlet.

Operation

- Place hot dogs on rollers.
- Turn heat to designated temperature. Left knob controls the heat of one set of five (5) rollers and the right controls the other set of five (5) rollers.
- For low heat, set control(s) to LOW using one or both sets of rollers.
- For high capacity, set control(s) to MEDIUM or HIGH using both sets of rollers.

Remove all food from the Machine before returning or storing

Caution

Machine MUST be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury or death.
Do NOT immerse any part of this equipment in water.

Party Line Rentals
21 Vreeland Ave Elmsford, NY 10523
(914) 592-1200
Partylinerentals.com