



# Frozen Drink Machine- Single

Please read these instructions carefully before use

 
## Key

A. **Main switch:** it is used to:

 

- turn on the machine and activate the auger
- turn off all machine functions.

B. **Refrigeration changeover switch:**

- in position "0" the refrigeration system is off;
- in position "I" the refrigeration system is in freeze mode

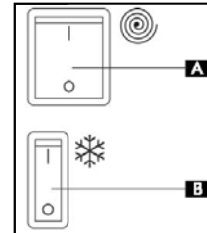

## Operation

- Mix the Bottle of Concentrate with 4 equal parts Water in a suitable container.
- The mix makes 2.5 Gallons of product but The Bowl of the Machine can only hold 1.5 Gallons of Product, so you *will* have leftover mix.
- Pour the product into the bowl, taking care not to overfill beyond the max level indicated.
- Switch  into position "I": machine powered and mixer on.
- Switch  into position "I" : refrigeration system on.
- It will take approximately Two hours for the mix to completely freeze. If you are adding alcohol, anticipate an additional Hour for the mix to Freeze.
- To dispense the beverage, pull down the tap lever and Enjoy!

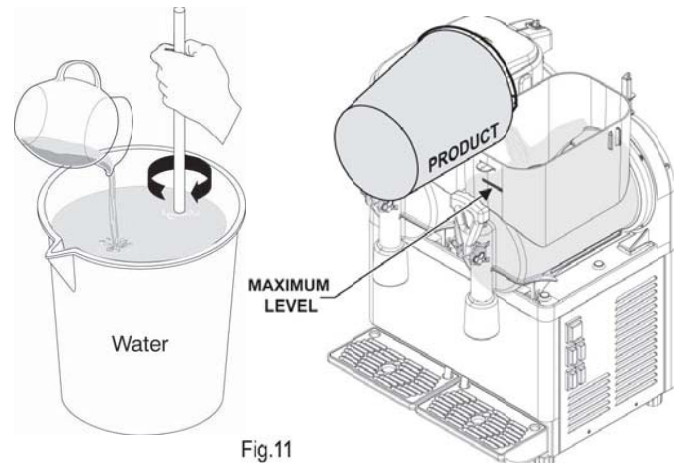 


Fig.11

## Adjusting Slush consistency

- The consistency of the Slush may be adjusted by means of the Yellow knob located in the back on the machine.
- Plus will produce a thicker consistency, Minus will produce a thinner consistency
- The adjustment may be made by hand or with the aid of a screwdriver.



## Readying the unit for return


- Before the Machine is returned, it must empty of the previously prepared product.
- While the machine is on, press the switch  into pos. "0" to shut down the refrigeration system.
- Position a container under the spout and pull down the tap lever to completely empty the bowl of its contents.
- After that, turn off the main/mixer switch and unplug the machine.

Fig.30



### Caution

- NEVER put ice into the machine, it will break the auger.
- Do not obstruct the grill vents on the side of the machine.
- Do not site the machine near heating equipment (stoves or radiators).
- Clearance of 10 inches must be left at the top.
- The machine must be installed indoors in a well-ventilated room on a firm, solid, level floor (slope less than 2°).
- It is forbidden to use extension cords or adaptors of any type.
- Product may be poured into the bowl only when the machine is off and unplugged.
- NEVER USE ONLY WATER
- NEVER INTRODUCE HOT LIQUIDS (with temperatures exceeding 25°C)
- Warning: There are some moving parts inside the bowl, which may cause injuries; turn off and unplug the machine before carrying out any operation inside the bowl.
- The machine may only operate in places with an ambient temperature ranging between 20°C and 32°C.
- If the machine is switched off with the containers even only partly filled with granita and is left off even for a brief time, a layer of ice may form on the surface. Should this occur, before turning the machine back you should remove the surface ice to prevent damage to the mixer components

Problem	Cause	Remedy
The machine does not turn on.	The main switch is off (positioned on "O").	Press the switch into position "I".
	The machine is not plugged in.	Insert the plug in a suitable outlet.
The auger does not turn	The switch is positioned on "O".	Press the switch into position "I".
	There are blocks of ice inside the bowl.	Empty the bowl and remove the blocks of ice; check that the product has been correctly diluted.
The machine does not make granita.	The switches are off	Press the switch into position "I".
	The machine is near sources of heat.	Install the machine in a suitable place.
	There is insufficient ventilation.	
	The consistency has not been regulated correctly	Correctly regulate the consistency.

If the machine malfunctions due to causes other than those listed in this table or the proposed remedies do not solve the problem, contact Party Line Immediately.

**Party Line Rentals**  
21 Vreeland Ave Elmsford, NY 10523  
(914) 592-1200  
Partylinerentals.com